

BJC-5100

**PARTS
CATALOG**

Canon

FIGURE 1

TRAY & ADAPTER


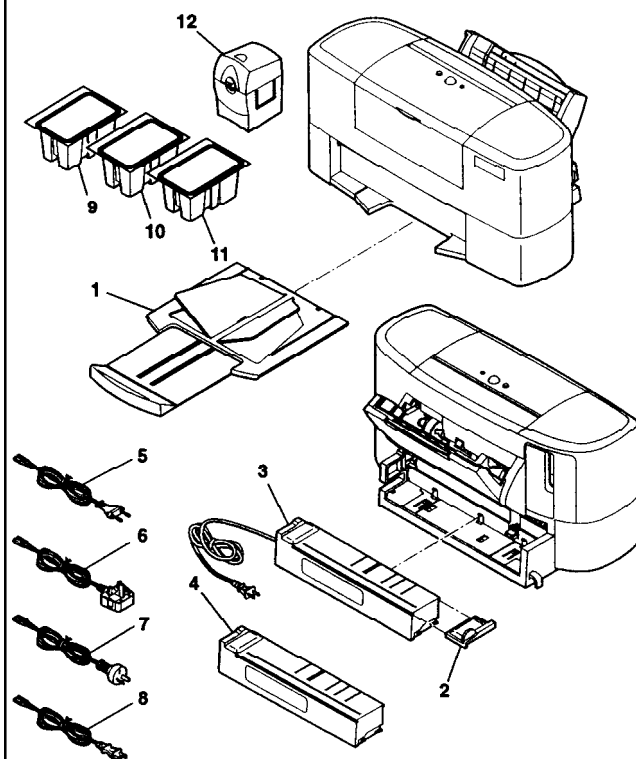


FIGURE 2

COVER

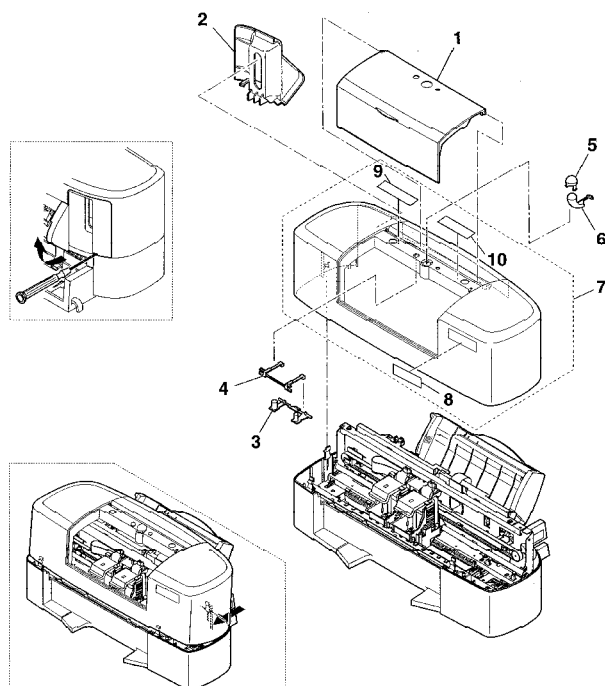

Unlatch two claws on the left and the front claw on the right first. Then, press the part shown by the arrow to remove Key No. 7.
Key No. 7を外す時は、左側の爪2カ所、右前側の爪を外した後、ボトムケースの右後ろを押します。

| NUM. | PART # | DESCRIPTION | NUM. | PART # | DESCRIPTION |
|------|--------------|----------------------------------|------|--------------|------------------------------------|
| 1-1 | QG8-0002-000 | OUTPUT TRAY UNIT | 2-1 | QF8-0001-000 | FRONT COVER ASS'Y (BJC-5000) |
| 2 | QG8-0066-000 | GUIDE, PAPER (BJC-5000) | | QF8-0001-010 | FRONT COVER ASS'Y (BJC-5100) |
| 3 | QH3-9001-000 | AC ADAPTER: 120V 60HZ | 2 | QA8-0001-000 | COVER, CONNECTOR (BJC-5000) |
| | QH3-9002-000 | AC ADAPTER: 120V 60HZ (BJC-5000) | | QA8-0085-000 | COVER, CONNECTOR (BJC-5100) |
| | QH3-9006-000 | AC ADAPTER: 120V 50/60HZ | 3 | QA8-0014-000 | BUTTON, PUSH (BJC-5000) |
| 4 | QH3-9004-000 | AC ADAPTER: 220-240V 50HZ | | QA8-9013-000 | BUTTON, PUSH (BJC-5100) |
| 5 | WT3-5069-000 | CORD, POWER: 220V-240V | 4 | QA8-0015-000 | BAR, BUTTON |
| 6 | WT3-5061-000 | CORD, POWER: 220V-240V (UK) | 5 | QA8-0067-000 | CAP, INDICATOR |
| 7 | WT3-5060-000 | CORD, POWER: 220V-240V (AUS) | 6 | QA8-0013-000 | GUIDE, INDICATOR |
| 8 | WT3-5084-000 | CORD, POWER: 250V (CHN) | 7 | QF8-0002-000 | UPPER COVER ASS'Y (BJC-5000) |
| 9 | NPN | BLACK BJ CARTRIDGE PACK | | QF8-0015-000 | UPPER COVER ASS'Y (BJC-5100) |
| 10 | NPN | COLOR BJ CARTRIDGE PACK | 8 | QA8-0017-000 | PLATE, PRODUCT NAME (BJC-5000) |
| 11 | NPN | PHOTO BJ CARTRIDGE PACK | | QA8-0118-000 | PLATE, MODEL NAME (BJC-5100) |
| 12 | NPN | BJ CARTRIDGE CONTAINER | 9 | QA8-0004-000 | LABEL (BJC-5000) |
| | | | 10 | QA8-0073-000 | LABEL, INK TANK REPLACE (BJC-5000) |

FIGURE 3 SHEET FEEDER UNIT


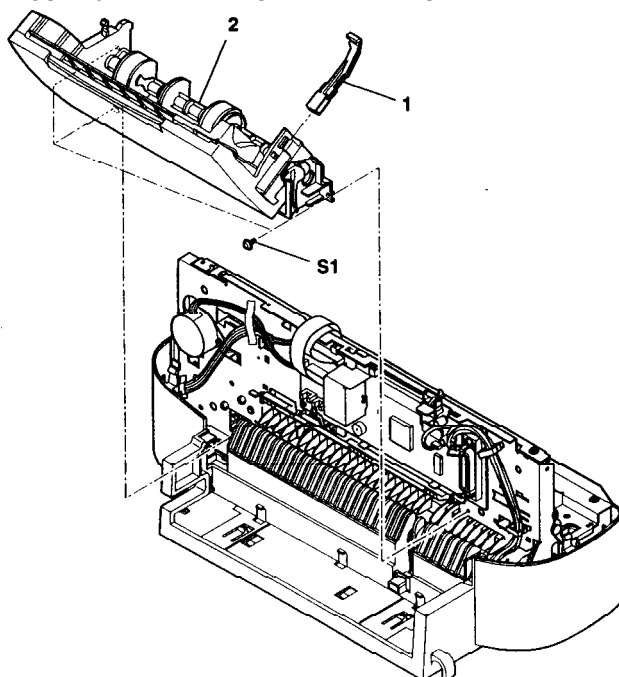


FIGURE 4 LOGIC BOARD & BOTTOM CASE

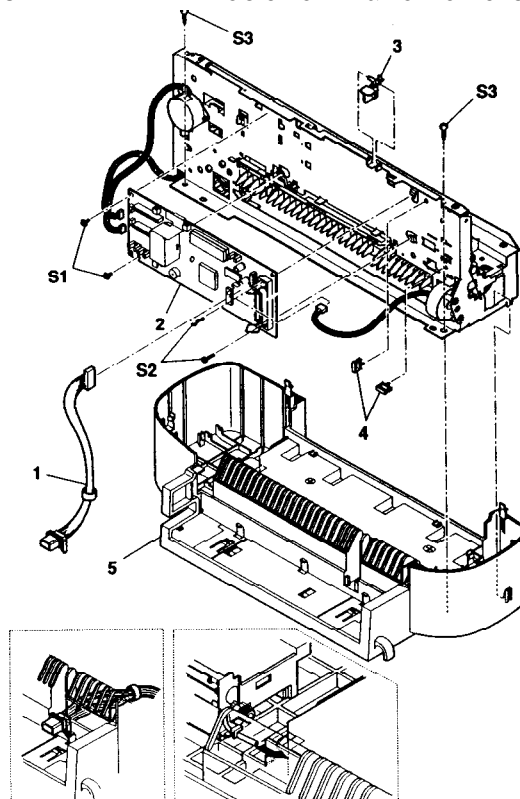

| NUM. | PART # | DESCRIPTION | NUM. | PART # | DESCRIPTION |
|------|--------------|------------------------------|------|--------------|---------------------------------|
| 3-1 | QB1-2494-000 | HOLDER, SHEET FEEDER | 4-1 | QH2-9002-000 | CABLE, POWER SUPPLY (US/CANADA) |
| 2 | QG8-0015-000 | SHEET FEEDER UNIT (BJC-5000) | | QH2-9003-000 | CABLE, POWER SUPPLY (OTHER) |
| | QG8-9003-000 | SHEET FEEDER UNIT (BJC-5100) | 2 | QG8-8002-020 | LOGIC BOARD ASS'Y (BJC-5000) |
| | | | | QG8-8011-000 | LOGIC BOARD ASS'Y (BJC-5100) |
| | | | 3 | QA8-0025-000 | ARM, COVER SENSOR |
| | | | 4 | QA8-0077-000 | CLAMP, CABLE (2) |
| | | | 5 | QG8-0001-000 | BOTTOM CASE UNIT (BJC-5000) |
| | | | | QG8-0023-000 | BOTTOM CASE UNIT (BJC-5100) |

FIGURE 5

WASTE INK ABSORBER


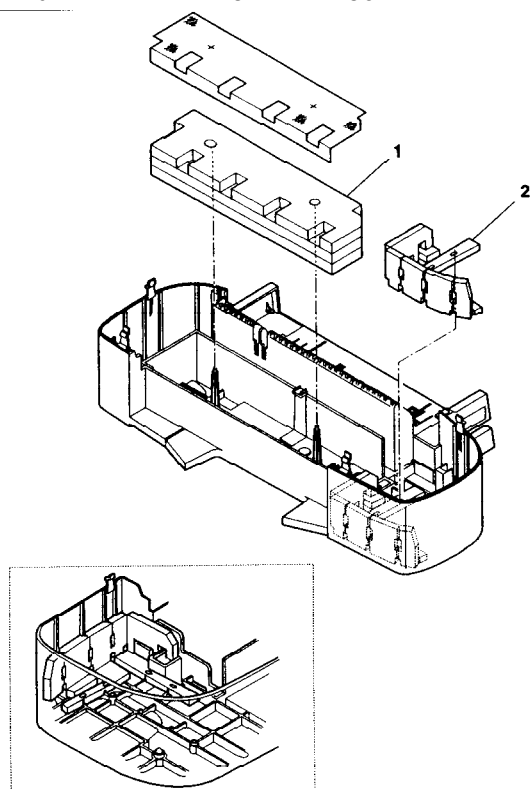


FIGURE 6

CARRIAGE UNIT

When assembling Key No. 5 use the tension spring (QY9-0039-000). Remove the spring after fasten the screw.
Key No. 5を取り付ける際には専用工具バネ (QY9-0039-000) を使用して下さい。
ビス止め後はバネを外して下さい。

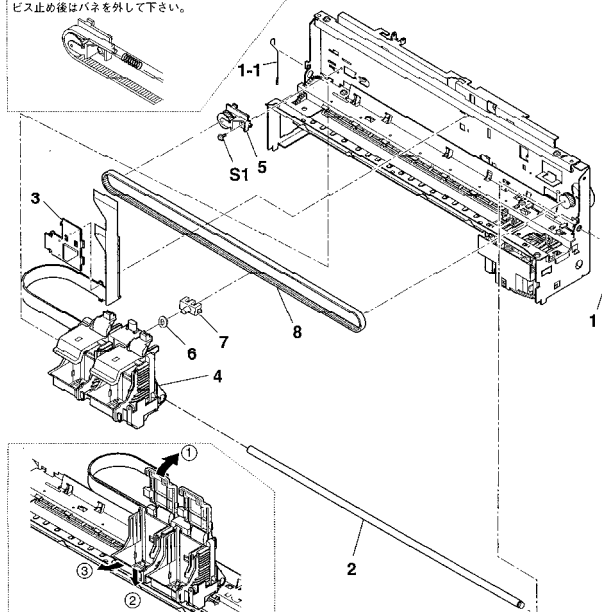

When removing the carriage unit,
① lift up the lever,
② holding down the stay,
③ pull out the carriage unit.
キャリッジユニットの外し方は、
① レバーを上げ
② ステイを下に押さえながら
③ キャリッジの下側を回転させる様に外します。

| NUM. | PART # | DESCRIPTION | NUM. | PART # | DESCRIPTION |
|------|--------------|--------------------------|------|--------------|----------------------------|
| 5-1 | QA8-0007-000 | ABSORBER, INK (BJC-5000) | 6-1 | QB1-2415-000 | CLIP, SHAFT |
| | QA8-0007-010 | ABSORBER, INK (BJC-5100) | 1.1 | QA8-0125-000 | CLIP, SHAFT (L) (BJC-5100) |
| 2 | QA8-0079-000 | ABSORBER, SUB INK | | QB1-2415-000 | CLIP, SHAFT (BJC-5000) |
| | | | 2 | QA8-0019-000 | SHAFT, CARRIAGE (BJC-5000) |
| | | | | QA8-0126-000 | SHAFT, CARRIAGE (BJC-5100) |
| | | | 3 | QA8-0018-000 | HOLDER, CABLE |
| | | | 4 | QG8-0008-000 | CARRIAGE UNIT (BJC-5000) |
| | | | | QG8-9002-000 | CARRIAGE UNIT (BJC-5100) |
| | | | 5 | QF8-0003-000 | IDLER PULLEY ASS'Y |
| | | | 6 | QA8-0123-000 | SPACER, PLASTIC (BJC-5100) |
| | | | 7 | QA8-0048-000 | HOLDER, BELT |
| | | | 8 | QA8-0046-000 | BELT, CARRIAGE |

FIGURE 7


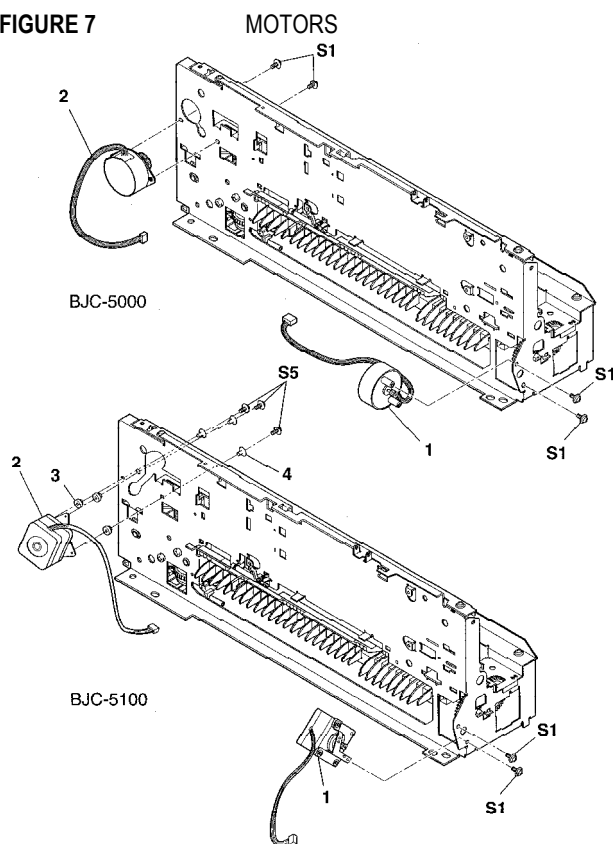


FIGURE 8

PURGE UNIT & STAY UNIT

When assembling or disassembling Key No. 5, its edge should not catch the gear.
Key No. 5の取り付け/取り外し時はステイのエッジがギアに引っ掛からないように注意して下さい。

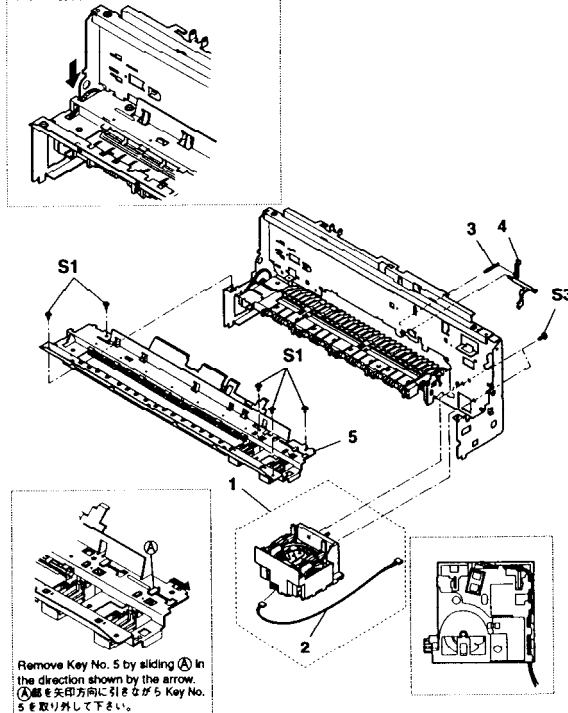

| NUM. | PART # | DESCRIPTION |
|------|--------------|------------------------------|
| 7-1 | QG8-0027-000 | FEED MOTOR UNIT (BJC-5100) |
| | QH4-9003-000 | MOTOR, PAPER FEED (BJC-5000) |
| 2 | QH4-9001-000 | MOTOR, CARRIAGE (BJC-5000) |
| | QH4-9007-000 | MOTOR, CARRIAGE (BJC-5100) |
| 3 | QB1-2441-000 | DAMPER (3) (BJC-5100) |
| 4 | QB1-2442-000 | SLEEVE, SCREW (3) (BJC-5100) |

| NUM. | PART # | DESCRIPTION |
|------|--------------|-----------------------|
| 8-1 | QG8-0011-000 | PURGE UNIT (BJC-5000) |
| | QG8-0011-010 | PURGE UNIT (BJC-5100) |
| 2 | QH2-9001-000 | PG SENSOR CABLE ASS'Y |
| 3 | QS5-2045-000 | SPRING, HOOK END COIL |
| 4 | QA8-0088-000 | LEVER, SENSOR |
| 5 | QG8-0005-000 | STAY UNIT (BJC-5000) |
| | QG8-9001-000 | STAY UNIT (BJC-5100) |

FIGURE 9 SPUR & WIPER UNIT


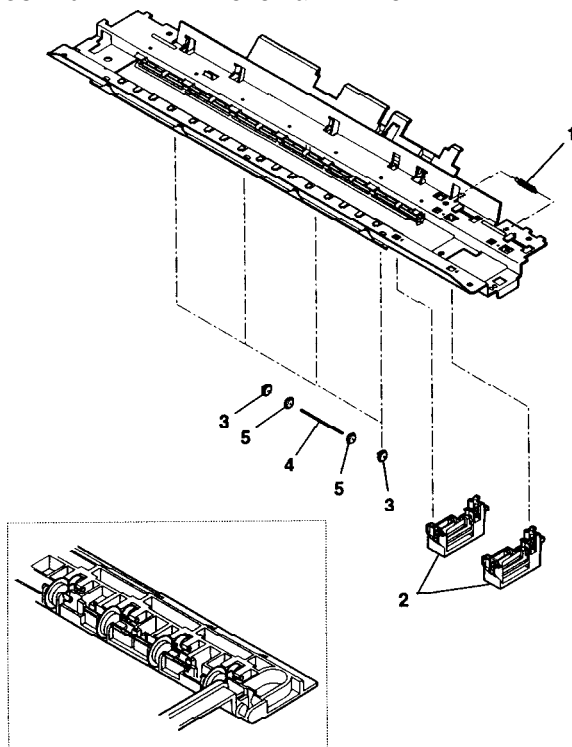


FIGURE 10 PLATEN UNIT

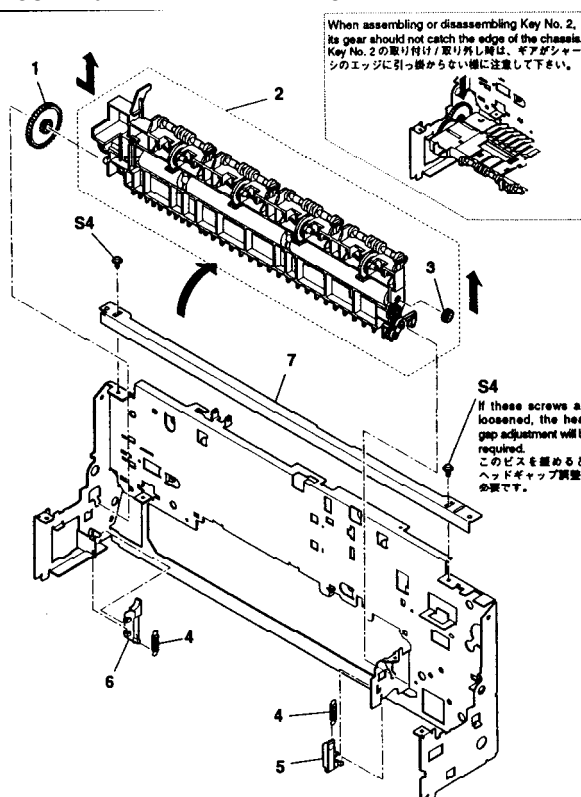

| NUM. | PART # | DESCRIPTION |
|------|--------------|-----------------------|
| 9-1 | QA8-8514-000 | SPRING, HOOK END COIL |
| 2 | QG8-0007-000 | WIPER UNIT (2) |
| 3 | QA8-0068-000 | SPUR (8) |
| 4 | QA8-8513-000 | SHAFT, SPRING (4) |
| 5 | QB1-0841-000 | SPUR (8) |

| NUM. | PART # | DESCRIPTION |
|------|--------------|---------------------------|
| 10-1 | QA8-8001-000 | GEAR, SLOW DOWN |
| 2 | QG8-0010-000 | PLATEN UNIT (BJC-5000) |
| | QG8-0022-000 | PLATEN UNIT (BJC-5100) |
| 3 | QS5-0040-000 | GEAR, TRANSMISSION |
| 4 | QS5-2046-000 | SPRING, HOOK END COIL (2) |
| 5 | QB1-2406-020 | HOLDER, SHAFT |
| 6 | QA8-0022-000 | HOLDER, SHAFT |
| 7 | QA8-0020-000 | FRAME, CARRIAGE GUIDE |